

Dear Valued Customer,

Thank you and congratulations on your purchase of this innovative product. We back our product with a Viatek certified warranty. Your satisfaction is very important to us.

For operational questions or replacement parts please call 888-7VIATEK or contact your local VIATEK dealer.

Visit us on the web at www.viatekproducts.com for new product updates and information. Also please email us with any comments or questions at cs@viatekproducts.com

We look forward to serving you, now and in the near future.


Enjoy your Viatek Designed Product!

Kelli M. Lentine

Kelli M. Lentine
President



PARTS DIAGRAM:

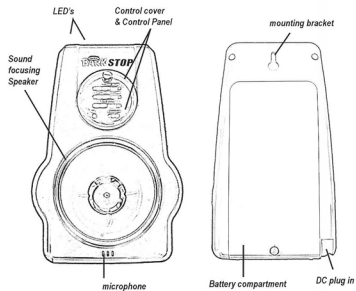

viatekproducts.com

888-7VIATEK

407 248 0123

1

2

CONTROL COVER:

The control cover is located on the top of the unit. The cover is transparent and waterproof. Remove screw to access the control panel.

CONTROL PANEL:

TEST BUTTON: Allows user to test if the unit is working. See diagram B.

SENSITIVITY SWITCH: Allows the user to select how LOUD the bark must be to activate the unit. Slide the switch to the left to increase sensitivity, and to the right to decrease it. **BE SURE TO STAND AWAY FROM SOUND.** See diagram B.



BARK NUMBER SWITCH: Allows user to set the number of barks that have to occur within a ten second time period for the unit to activate. See diagram B.

ULTRASONIC / AUDIBLE: Select ULTRASONIC to allow sound to be heard ONLY by dogs. Select Audible to allow sound to be heard by all. Green LED will light only when unit is activated. See diagram B.

viatekproducts.com

888-7VIATEK

407 248 0123

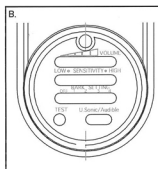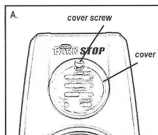

3

other Bark Stop products include:



Bark Stop Collar



Professional Bark Stop



Portable Bark Stop

VIATEKPRODUCTS.COM




VIATEK USA, CORPORATION INC
8888 GARDNER DR SUITE 1025
DALLAS, TX 75217
T 972 288-6150
F 972 288-7200
E info@viatekproducts.com



VIATEK MEXICO
MEXICALCANTO TR. 156A. P.O. BOX CAL. BARRA
MEXICO CITY, MEXICO C.P. 06700
T 52 55 5581 5286
F 52 5558 8930
E info@viatekproducts.com



VIATEK EUROPE
UNIT 1, KINGSPIRE HOUSE
JANNEY DR
LONDON, ENGLAND E16 1TG
T +44 (0)20 7652 0252
E info@viatekproducts.com
viatekgroup.com

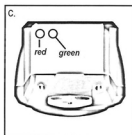


LED'S:

The left LED is red and lights to indicate the unit is on, and sensitivity setting has been set. See diagram C.

The right LED is green and lights to indicate the unit has been triggered by barking.

MOUNTING:

The Super Bark Stop should be placed as close to the source of nuisance barking as possible, facing the dog(s), and at a height of no greater than 6 feet. Be sure your dog neighbors dog cannot reach the unit or the power supply cord. Placement of the Super Bark Stop is important because ultrasonic sound patterns do not penetrate solid materials. The ultrasonic sound is deflected and absorbed within the environment. Hard surfaces such as concrete, wood, metal, plastic, and window glass will deflect the sound. Soft surfaces such as grass, plants, or bedding can absorb the sound. The unit should be placed with no obstructions in between the unit and cause of the nuisance barking. See diagram D.

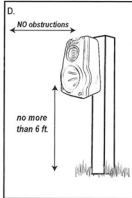

viatekproducts.com

888-7VIATEK

407 248 0123


4

VIATEK™

model BC16

SUPER BARK STOP

Directions for Use

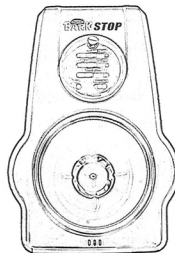

WARNING:
Disconnecting or the electrical components within this dog collar may result in exposure to shock or fire. Do not use a power cord which is loose in any state of disrepair to connect to power. Read manual and other manufacturer's instructions.

