

Barkmate 113R Dog Training System Manual

113R Remote Training Kit Contents

1. Remote Trainer Transmitter
2. 113R Receiver Collar (Medium to Large Size Dogs)
3. 113R Collar and Remote Transmitter Charger
4. 1 Pair of Long Contact Probes for long hair dog

Features:

- Up to 800 metres range
- Expandable to control 3 dogs (with purchasing extra collar)
- Waterproof (IPx7)
- Tone, Vibration and 10 variable levels in both continuous and nick stimulation
- Transmitter and collar are rechargeable with 3 hours quick charge
- Easy to use, comfortable and ergonomic transmitter
- Battery indicator



The Barkmate 113R Receiver Collar

The Standard Barkmate 113R Receiver Collar can be used for Barkmate Dog Fence system as well as Barkmate Remote Dog Training System. This collar has two operating mode which are Dog Fence Mode and Dog Training Collar Mode. **Please make sure the collar is in Dog Training Collar mode before using.**



On/Off Button – change operating mode

Press and hold on 4 seconds to turn the collar on. The Collar will beep twice rapidly, and the green LED light will flash once every 5 seconds. Press and hold on 4 seconds to turn the collar off. The collar emits a long beep, and the LED light will turn off. NOTE: when turning the collar off, it is very IMPORTANT to release the button after the LONG BEEP, or the collar will go into pairing mode. It will lose the connection with the OPTIONAL remote transmitter.

Switch between Fence Collar only mode or Dog Training Collar mode

Fence Collar only mode: Containment only, LED flashes *Green twice every 5 seconds*

Dog Training Collar mode: Remote training activated, LED flashes *Green once per 5 seconds*

Change the operating mode when the collar is ON! Press and hold the ON/OFF button while the collar is on for 2 seconds, the LED will turn Red. Release the Button immediately, the Green light will flash either once or twice to indicate the current operating mode. Twice every 5 second is the Fence only Mode and once every 5 second is the Dog Training Mode. To change the mode, repeat the step. If the ON/OFF button has been pressed too long, the collar will be turned off and you will hear a long beep.

The 113R collar has 3-hour fast charge battery. The LED will flash Red when it needs to charge, and Green means fully charged.

The Barkmate Remote Training Transmitter



Stimulation Level Adjustment Button

“+” and “-” to adjust the stimulation output. Press + to increase and - to decrease. The Maximum level is 10.

The ON/OFF Button

Hold the button for 2 seconds to turn it on. The LED indicator turn Blue then off, and the LCD should show default "A01. To switch the power off, hold this button for 2 seconds and the power light indicator will switch off.

Beep/Tone Button



Press the button, the collar will emit a no-stimulation Beep.

Vibration Button



Press once for a single short vibration. Press and hold the button for a continuous vibration for max. 8 seconds.



Press once for a single short static correction with pre-set output. Press and hold the button for a continuous static correction for max. 8 seconds.





The Dog Selector Buttons

The Transmitter is able to train up to 3 dogs up to 800 metres line of sight. The default is in "1". The LCD screen will display dog ID "A XX". Press "2" button to switch to dog 2. The LCD will display "BXX". Press 3 to switch to dog 3. And the LCD will display "C XX". A = Dog 1; B = Dog 2; C = Dog 3; "XX" = The output level for static correction & vibration.





Please Note: The LED flashes Red when the battery is low.

The Barkmate Training remote is able to control up to 3 collars. You may need to unpair the collar before you can pair it with the new remote as the collar may be paired with a different remote for testing purpose from the factory. MAKE SURE the collar is in dog training mode (flashes GREEN once every 5 seconds).

Unpairing the new collar/remove coding

1. Turn both collar (wish to unpair) and remote transmitter on. (if you have more than one collar, please turn off other collars). Keep the collar close to transmitter (almost touches or touches each other).
2. Press & hold both  and  button on the remote in the same time, until the digit on the LCD changes very fast.
3. Press any dog selector button ("1", "2" or "3"). Once you press the button, the collar should beep five times rapidly. If the collar doesn't beep, release the button and press/hold the button ("1", "2" or "3") again.
If you want to remove an existing collar from the number, you can press and hold the number of dog selector button until the collar beeps five times and flashes Green Rapidly.
4. Press & hold both  and the  button again until the digit on the LCD display stop changing. The collar is unpaired (coding removed) from previous transmitter successfully. Doq collar should still flash Green rapidly.

Pair the new collar to the remote

1. Turn both collar (wish to pair) and remote transmitter on (Collar in Dog Training Mode).
2. Press & hold the  button and  button at the same time, until the digit on the LCD display changes very fast. It means the remote transmitter is enter the pairing mode. The LED on dog collar should flash quickly in the same time.
5. Press & hold on the Dog selection button: Press and hold "1" to match the Receiver Collar as the dog 1, press and hold "2" to match the Receiver Collar as the dog 2, or press and hold "3" to match the collar as the dog 3. The collar should "beep" 5 times rapidly and green LED on the collar will flash normally. If the collar doesn't beep, release the button and press/hold the button again.
3. Release the Dog Selector button.
4. Press & hold the  button and the  button at the same time again, until the digit on LCD display is no longer changing, then release both buttons.
5. Select the number of collar and test with warning beep or vibration

Transmitter Charging

The transmitter has 2-hour fast charge lithium battery. When the Transmitter is plugged in with DC power supply, the LCD will display "CHA". This means the device is charging. The LCD will display "FUL" when the transmitter is fully charged.

Troubleshooting

The Dog Does not respond to stimulation

1. Check if the collar is fitted properly
2. For long/thick hair dog, trim the hair of the contact area. Use the long contact probes, must make good contact with skin.
3. Recharge the battery/replace new battery of the collar, test the output with the collar test light tool. The collar will still beep with low battery but it would not emit the strength of stimulation.

If the signal is not consistent, please contact DogMaster Trainers Support Line: AU: 07 5559 9100, NZ: (07) 855 4799.